

4-Wheel

Model Number	MV600
Weight Capacity	350 lbs.
Maximum Speed ¹	Up to 11 mph at 350 lbs. Up to 11.4 mph at 200 lbs.
Ground Clearance ³	5.5" at motor
Turning Radius ³	94.75"
Overall Length ³	61.25"
Overall Width ³	32.5"
Seat-to-Ground Height	30"-31.5"
Seat-to-Deck Height	18.75"-20.25"
Front Tires	14.5" tubeless pneumatic
Rear Tires	14.5" tubeless pneumatic
Suspension	Front and rear (CTS Suspension)
Range Per Charge ^{1,2}	Up to 18.6 miles at 350 lbs. (75 AH) Up to 22.6 miles at 200 lbs. (75 AH) Up to 24.2 miles at 350 lbs. (100 AH) Up to 29.4 miles at 200 lbs. (100 AH)
Total Weight Without Batteries ⁵	274 lbs.
Heaviest Piece When Disassembled ³	219 lbs. (unit does not disassemble)
Standard Seating	Type: Pillow-top, limited recline Weight: 48.6 lbs. Material: Black vinyl Dimensions: Width: 18.5", Depth: 16.5"
Drive System	24-volt DC motor, rear-wheel drive, dual in-line
Dual Braking System	Regenerative and electromechanical
Battery Requirements ^{4,6}	Size: (2) 75 AH; (2) optional 100 AH Weight: 48 lbs. each (75 AH); 60 lbs. each (100 AH)
Battery Charger	Off-board, 8 amp
Warranty	Frame: lifetime limited Drivetrain: 2-year limited Electronics: 2-year limited Battery: 6-months

Non-Medical Device

This product is not a medical device and is not intended to assist, treat, diagnose, or alleviate any medical condition or disability.

- 1 Varies with user weight, terrain type, battery amp-hour (AH), battery charge, battery condition, and tire condition. This specification can be subject to a variance of (+ or -) 10%.
- 2 Tested in accordance with ANSI/RESNA, MC Vol2, Section 4 & ISO 7176-4 standards. Results derived from theoretical calculations based on battery specifications and drive system performance. Test conducted at maximum weight capacity.
- 3 Due to manufacturing tolerances and continual product improvement, this specification can be subject to a variance of (+ or -) 3%.
- 4 Battery weight may vary based on battery manufacturer.
- 5 Includes standard seat weight.
- 6 AGM or gel cell type required.

PRIDE[®]
PERFORMANCE MOBILITY[™]

PRIDE[®]
MOBILITY
LIVE YOUR BEST[™]

(US) 800-800-8586 • (Canada) 888-570-1113

pridemobility.com |    

HCPCS codes provided should not be considered as legal advice and do not guarantee reimbursement. DME providers are responsible for determining appropriate billing codes when submitting for insurance reimbursement.

NOTE: All specifications subject to change without notice. The information contained herein is correct at the time of publication; we reserve the right to alter specifications without prior notice. Speed and range vary with user weight, terrain type, battery charge, battery condition and tire pressure. Due to manufacturing tolerances and continual product improvement, length, width, turning radius and ground clearance can be subject to variance of + or - 3%. Special order seats or non-standard dimensions will not be fold-flat and depth-adjustable.

WRANGLER_012720



YOUR
OUTDOOR
ADVENTURE
AWAITS



LIVE YOUR BEST[®]

pridemobility.com |    

EVERYTHING YOU WANT IN AN OUTDOOR SCOOTER


18.5" x 16.5" Limited recline, black vinyl, high-back seat with lumbar and pillow-top headrest, flip-up height and angle-adjustable armrests



User friendly console

Storage compartment under the tiller

Front LED lights

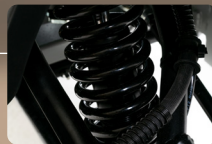

Pride's CTS Suspension includes adjustable shocks for greater comfort



Backup sensors with LED light



Tiller adjustment lever



Front lights

Rugged and built to last, the **Wrangler®** is everything you want in an outdoor scooter! Equipped with front and rear suspension, this aggressive scooter is designed for cruising on walking trails or driving around your property. Enjoy total visibility with complete LED lighting. With a user-friendly console and dual hydraulic brakes for added safety, the Wrangler is the perfect way to embrace life in the great outdoors!

Additional Features

- User friendly LED console displays time, temperature, miles driven and trips taken
- Adjustable delta tiller with ergonomic, wraparound handles
- USB charger built into the tiller for convenient charging of smart phones and portable devices
- Durable and stylish rear bumper
- Standard with (1) rearview mirror
- Easily accessible tie-down points (for transport of unoccupied scooter)
- Full LED lighting package includes headlights, hazard lights, rear backup sensor LED lights and directional signals
- XLR charging port on tiller
- Hydraulic hand brake

Available Colors



Desert Sand

Stone Grey

Accessories*

- Cane/crutch holder (single, double)
- Cell phone holder
- Cup holder
- Forearm crutch holder
- Front basket
- 50", 60", 70" lap belt
- Oxygen tank holder
- Quad cane holder
- Rear basket
- Additional rearview mirror available
- Saddlebag
- Walker holder
- Wishbone crutch holder

Options

- Group 27 (100 Amp) batteries

Military Patches



*Only one rear accessory can be used at a time.